

HOW TO... WIE... COMMENT...

Change the Pinion / Motor: Wechselt man das Motorzeitrad / Motor: Changez le Pignon / Moteur:

- Remove the motor cover with a 2.5mm screwdriver.
- Remove the motor housing with a 2.5mm screwdriver.
- Remove the motor pinion with a 2.5mm screwdriver.
- Remove the motor housing with a 1.5mm screwdriver.
- Remove the motor pinion with a 2.5mm screwdriver.

HOW TO... WIE... COMMENT...


Set the Slipper Clutch. Stellt man die Rutschkupplung ein. Réglez de l'embrayage à glissement limité (Slipper)

- Adjust the slipper clutch with a 2.5mm screwdriver.
- Adjust the slipper clutch with a 2.5mm screwdriver.
- Adjust the slipper clutch with a 2.5mm screwdriver.
- Adjust the slipper clutch with a 2.5mm screwdriver.

ARRMA

VORIEKS BOOST

TECHNICAL PACK! TECHNISCHES PACK! PACK TECHNIQUE!

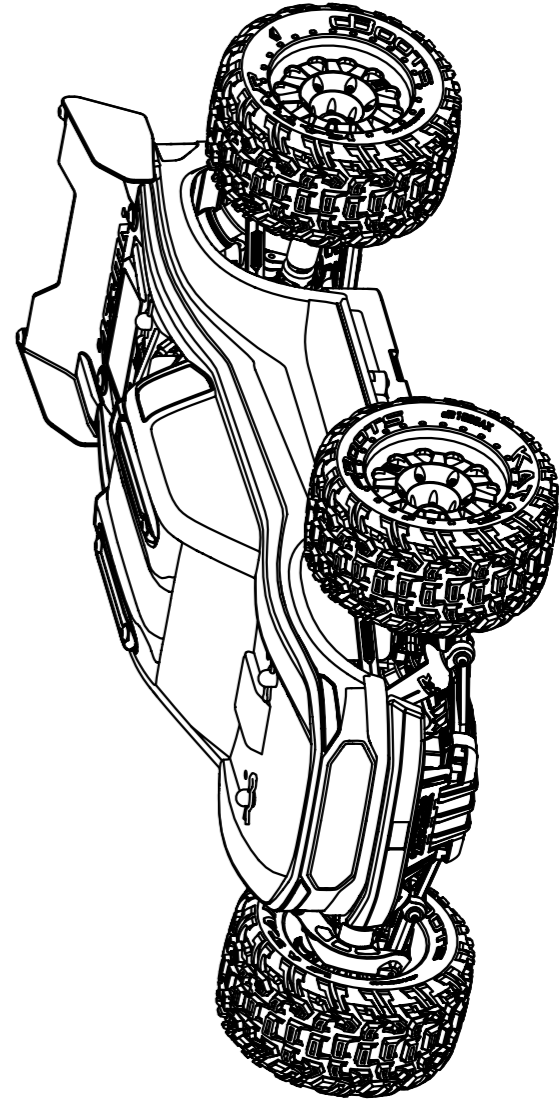

HOW TO... WIE... COMMENT...

Set the Slipper Clutch. Stellt man die Rutschkupplung ein. Réglez de l'embrayage à glissement limité (Slipper)

- Adjust the slipper clutch with a 2.5mm screwdriver.
- Adjust the slipper clutch with a 2.5mm screwdriver.
- Adjust the slipper clutch with a 2.5mm screwdriver.